



**MATERIAL NOTES** - 18.05.2020 - [www.vs-furniture.com](http://www.vs-furniture.com)

## **Cleaning and maintaining laminated surfaces, such as chipboard panels (LIGNOpal), LIGNOdur, CDF, MDF or chip-plywood boards.**

**Note on COVID-19:** The Centers for Disease Control and Prevention (CDC) offers detailed cleaning and disinfecting guidance depending on how often surfaces are touched. To learn more about their latest recommendations, please visit [www.coronavirus.gov](http://www.coronavirus.gov).

**General information:** Laminated furniture surfaces do not require intensive cleaning since the non-porous surface ensures simple maintenance. Clean off minor soiling with a moderately damp cloth or sponge and remove more stubborn dirt with a little water and a gentle cleaning agent or suds. Quickly remove all excess water with a cloth or sponge. Then wipe wooden edges with dry rags.

**Do not use any aggressive and/or abrasive cleaning materials.** These can damage the surface.

Only use **cleaning cloths or rags or natural or synthetic sponges for cleaning**. Do not use any synthetic cleaning pads, microfiber cloths or steel wool.

**Adhering limescale deposits/stains** can be eliminated with a warm 10% vinegar or citric acid solution. Then wipe over again with clean, warm water.

If possible, remove any **marks** made by ball pens, felt pens, marker pens etc. before they dry in.

Arrange for a specialist to remove any **heavy-duty or difficult-to-remove stains** due, for example, to lacquers, adhesives, spray paints or dried-in marks left by ball-point pens, felt pens or board markers. You are advised to contact the VS Service department directly.